



# ISOLOG 3D QUICKGUIDE | CONTROL

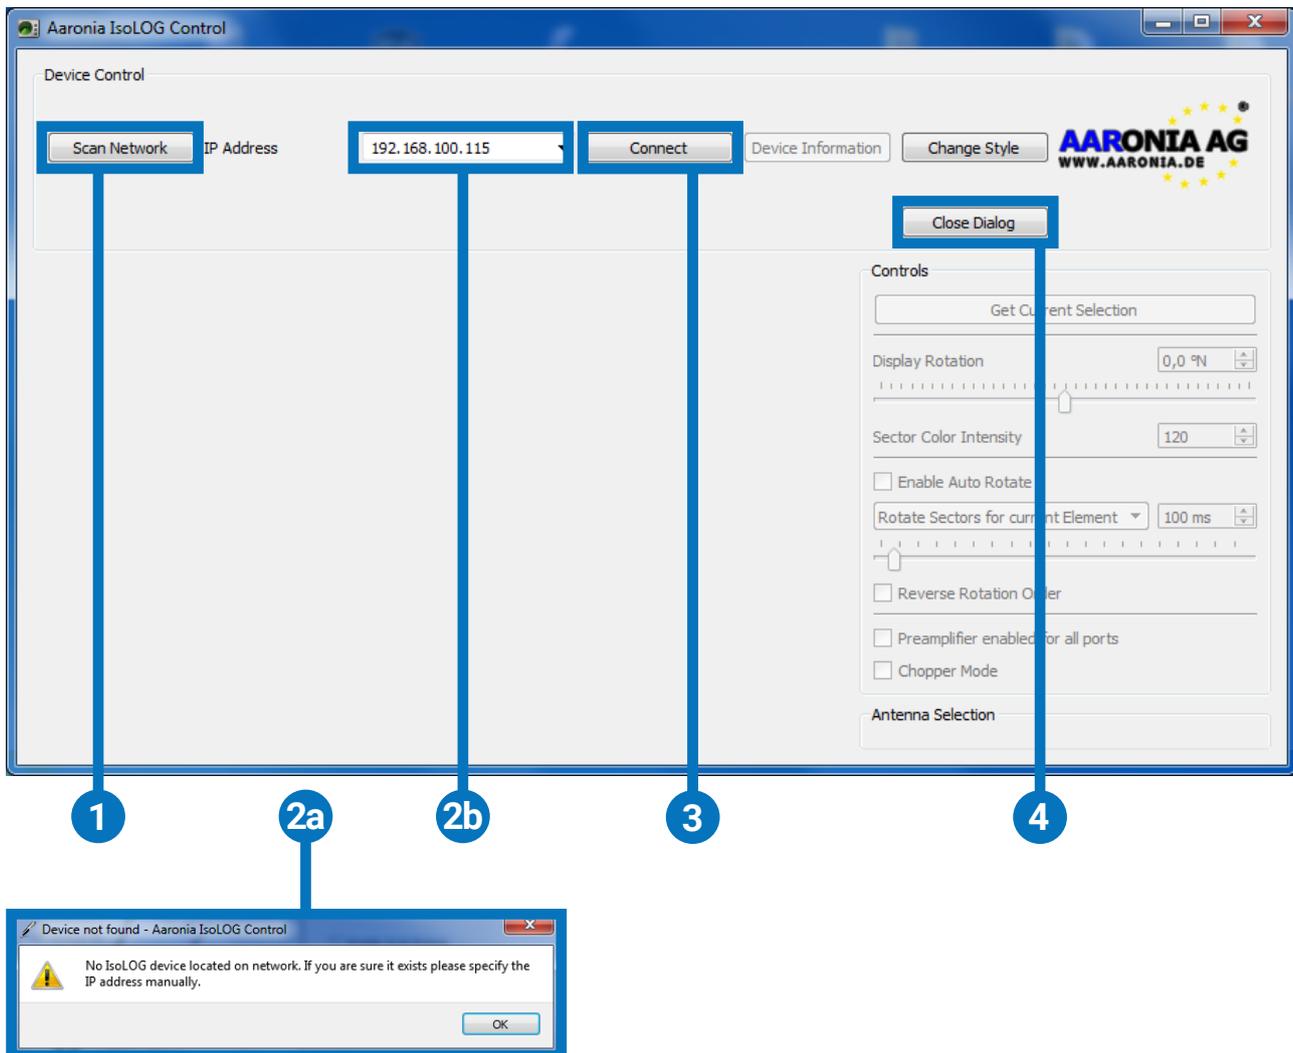


- 1 Scan for antennas in the connected network
- 2a Error if the automatic scan fails to find an antenna
- 2b Field for manual IP input (if you have an antenna connected but the scan fails)
- 3 Connect to the antenna
- 4 Close the application




# ISOLOG 3D QUICKGUIDE | CONTROL

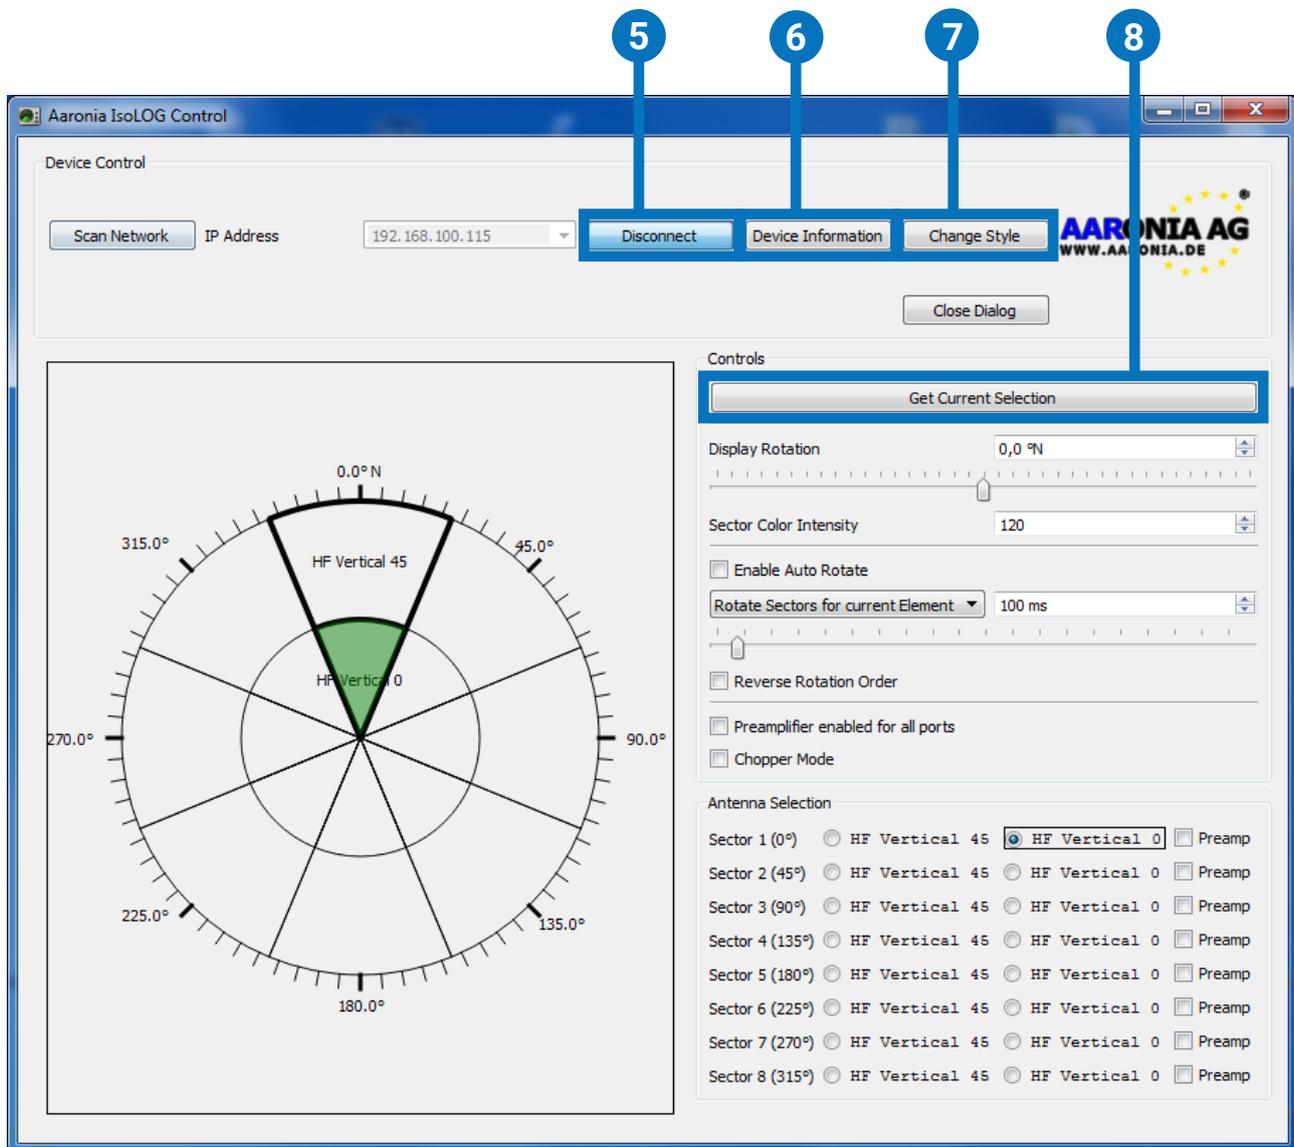

- 5 Disconnect from the antenna
- 6 Show information about the connected antenna
- 7 Change the interface of the application
- 8 Get the current element and sector

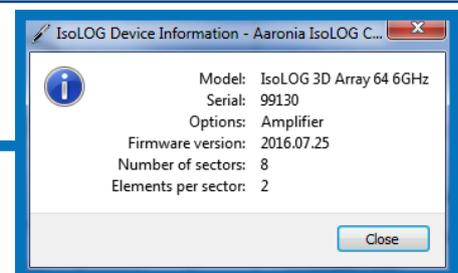


# ISOLOG 3D QUICKGUIDE | CONTROL

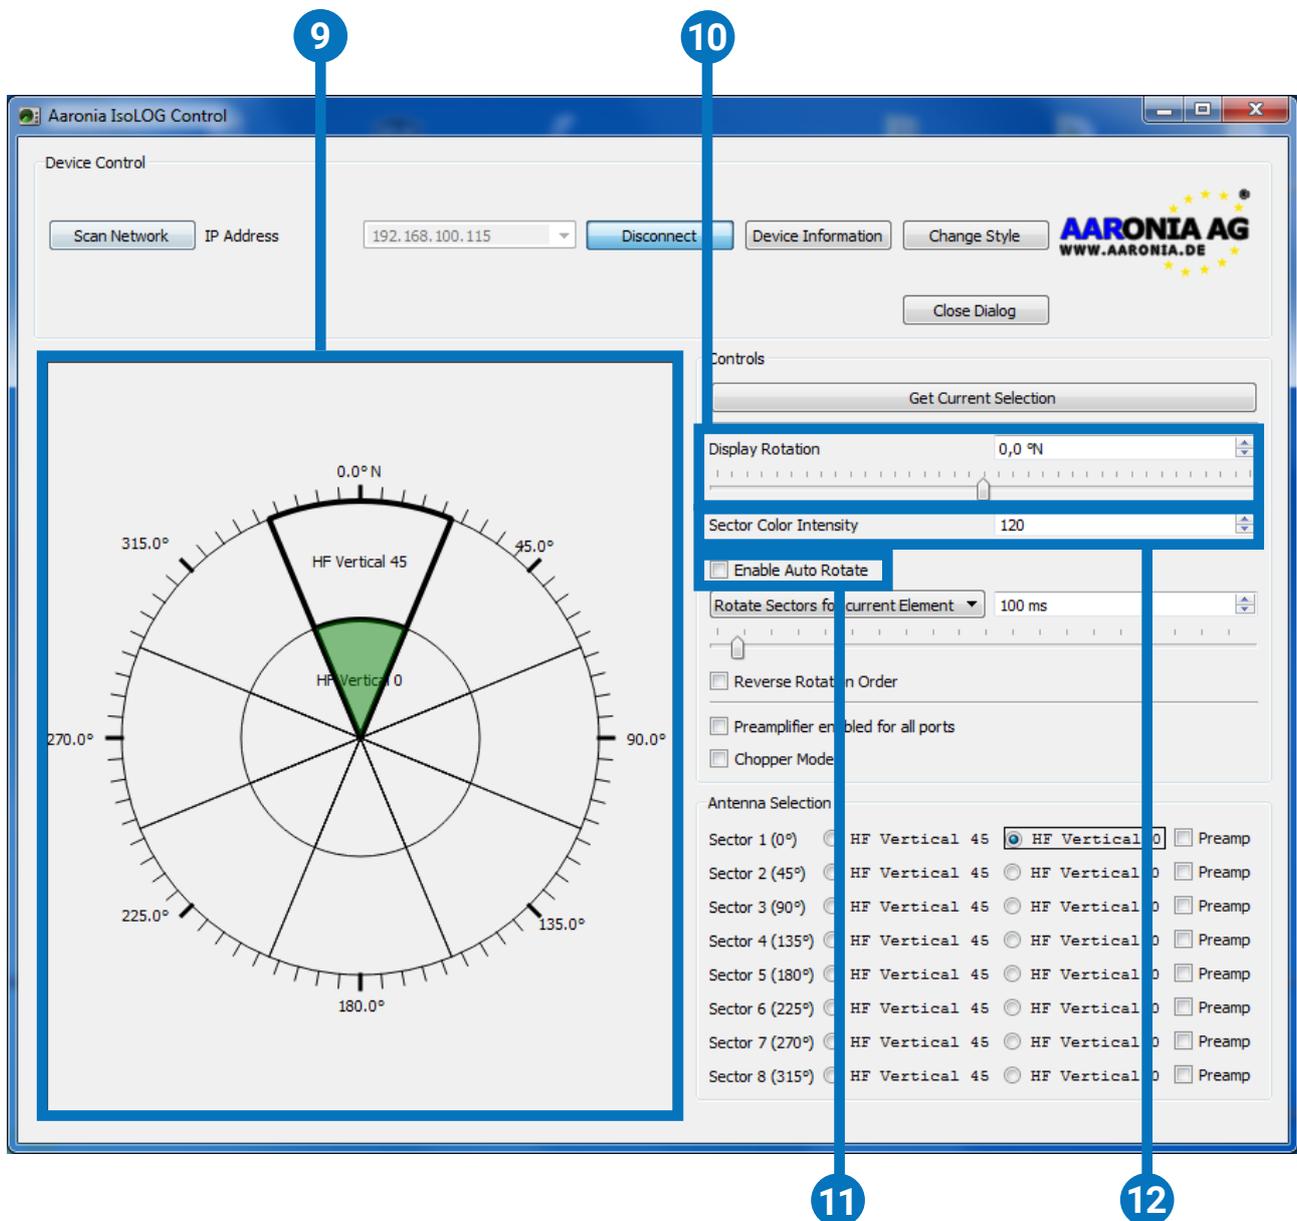

- 9 Active sector and element display
- 10 Rotate the display to fit the real-world position of the antenna
- 11 Enable the automatic rotation of sectors and/or elements
- 12 Change the sector color intensity in the display




# ISOLOG 3D QUICKGUIDE | CONTROL

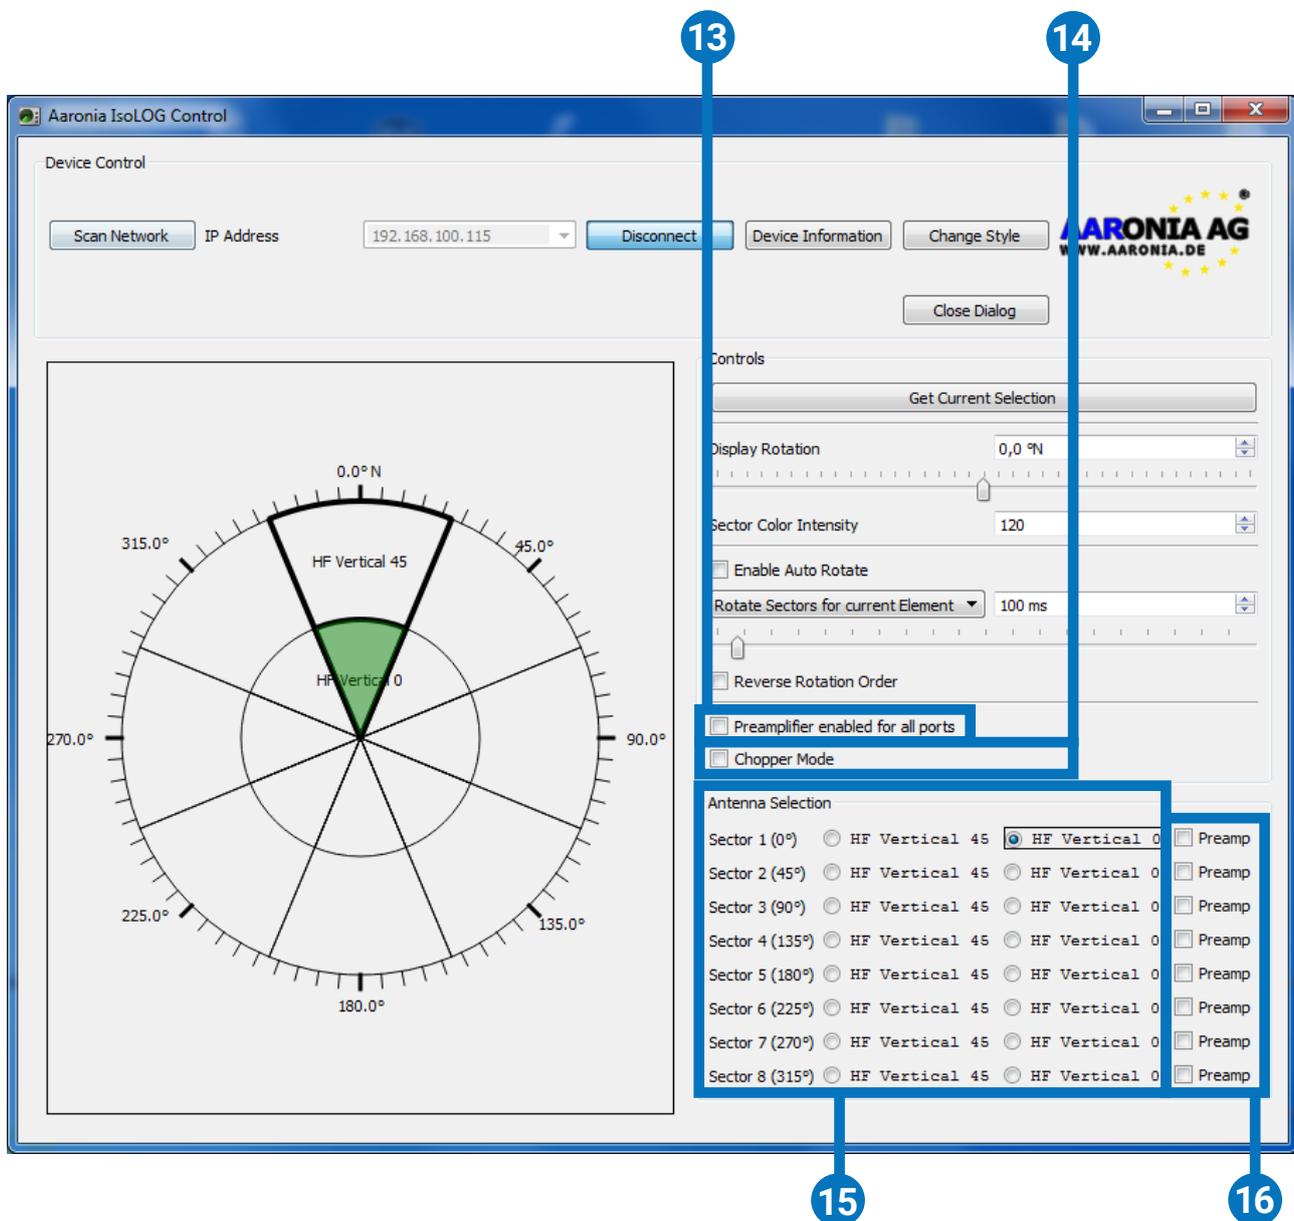

- 13** Toggle the preamplifiers for all antennas on/off
- 14** Rapid rotation through all elements for omni-directional RF detection
- 15** Select any available antenna manually
- 16** Turn the preamplifier for any antenna on/off



# ISOLOG 3D QUICKGUIDE | CONTROL

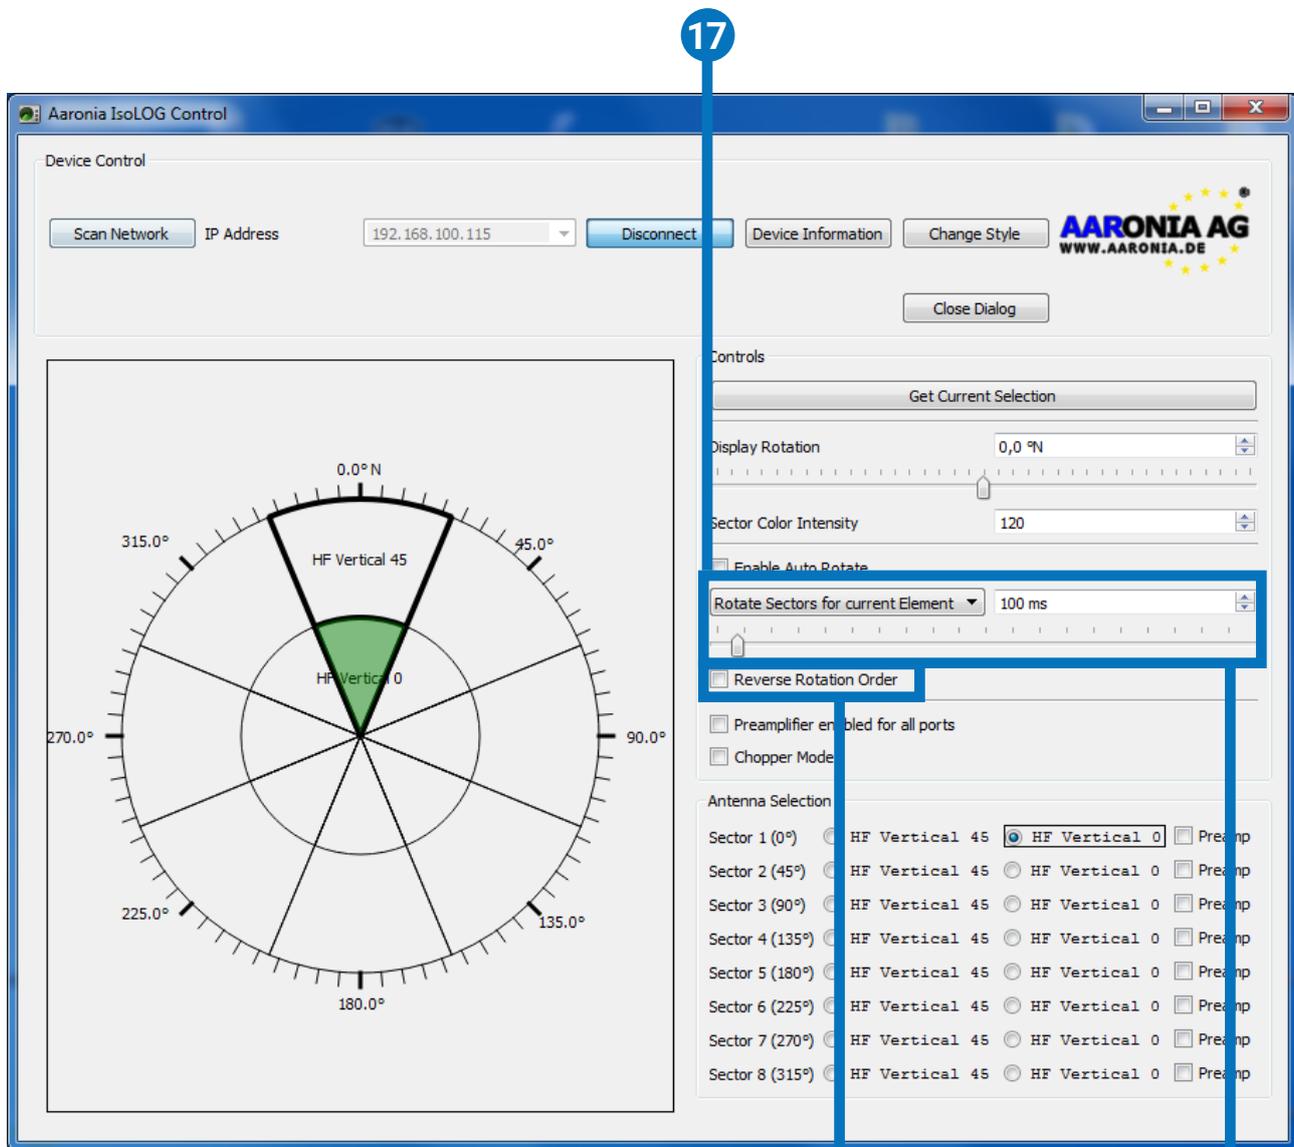

**17** Select the rotation mode and the rotation delay

**18** Reverse the rotation order

Rotate Sectors for current Element  
Rotate Sectors for current Element  
Cycle Elements in current Sector  
Rotate Sectors for all Elements  
Cycle Elements in all Sectors

IsoLOG Static IP-Address:  
**192.168.100.115**

